



These instructions are provided to those individuals who choose to install the grip themselves instead of a local pro shop or golf retailer.

FLAT CAT™ GRIP INSTALLATION INSTRUCTIONS

SUPPLIES NEEDED:

• Grip Tape (included) • Utility Knife • Grip Solvent or Mineral Spirits

REMOVING THE OLD GRIP:

1. Use a utility knife to cut the grip lengthwise. Be sure to cut away from yourself at all times.
2. Peel off the old grip.
3. Peel or scrape off the old tape.
4. Using a cloth with grip solvent or mineral spirits, clean any residue from the shaft.

INSTALLATION:



1. Place grip against putter shaft and mark end point with marker.




2. Place the tape lengthwise on the shaft, leaving some tape extended past the butt end of the shaft. Depending on the taper of your club shaft, additional layers of tape may be required for a tight fit.



3. Trim off excess tape leaving about 1/4" of the tape extended past butt end.



4. Adhere one side of tape to the shaft wrapping around shaft.

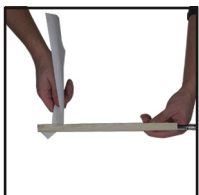

5. Peel off tape backing.

INSTALLATION CONTINUED:



6. Tuck the excess tape at butt end into the shaft.



7. Plug side hole near butt end of grip with your finger and pour a small amount of grip solvent or mineral spirits into grip.



8. Cover the open end of grip with your finger while still plugging hole in end of grip and shake to coat the inside of the grip evenly.



9. Pour the excess grip solvent over the length of the taped end of the shaft.



10. Firmly slide the grip on the club shaft until it is fully inserted into the grip.



11. Wipe any excess solvent from the grip and shaft.



12. Check that your Flat Cat™ grip is properly aligned to the flat side of the putter face by placing on table and making sure the putter face and flat side of the grip are both flat.



13. You can also check alignment by placing putter face against base of a wall and checking to see that the flat side of grip is flat against a wall.

14. Let the grip dry upright for at least 1 hour before use.